

Turnbuttons



2720

Ridged Turnbuttons w/screws

Each bag contains 100 Ridged Turnbuttons and 100 #3 x 3/8 Phillips Flat Head Screws



2721

Flat Turnbuttons w/screws

Each bag contains 100 Flat Turnbuttons and 100 #2 x 1/4 Phillips Round Head Screws

- Use on back side of picture frame to “hold-in” the contents of your completed picture.
- Use in replace of Framer’s Points
- Use as a decorative fastener to secure the Easel Back to the back of the frame.
- They can be easily turned to allow you to remove your artwork.